

# GR-1 Advanced Foot Controller

## Manual



© 2014 Vibesware  
Markus Pahl  
Schillerstrasse 18  
D-31141 Hildesheim  
Germany

[www.vibesware.com](http://www.vibesware.com)  
[info@vibesware.com](mailto:info@vibesware.com)

Rev. 1.1

Thanks for choosing Vibesware ! Enjoy gorgeous sustaining feedback with the GR-1. The Advanced Foot Controller is a helpful add-on that gives you all feedback harmonics with a control feeling like a WahWah pedal.



The feedback pitch range that can be obtained with a single string is really impressive and will expand the way of playing with your Guitar Resonator significantly. The feedback turns to different harmonics without the need of changing the position of the Resonator Head to the guitar neck.

The Advanced Foot Controller has a robust die-cast enclosure. Unlike the Basic Controller, it has four different positions for selecting different feedback harmonics.

### **Setup**

Simply connect the pedal between Resonator Box and Resonator Head. No extra power supply is needed. Please use two cables with stereo plugs. You can use the cable delivered with the GR-1 and the second cable delivered with the controller.

You can also use longer cables depending on your setup needs.



According to your preferences you may select the phase at the Resonator Box that way that the basic note feedback occurs at the basic position of the controller (pedal in upper position). Alternatively, you might prefer to pre-select the phase at the Resonator Box differently. Then, the basic note feedback occurs in the lower middle position of the foot controller.

Note that the phase also depends on the pick-up „polarity“ (coil turning direction), which means that the pre-selected position may vary depending on your selected pickup. In that case you have another interesting option to change harmonics by pickup selection !